


QUEST

leisure products

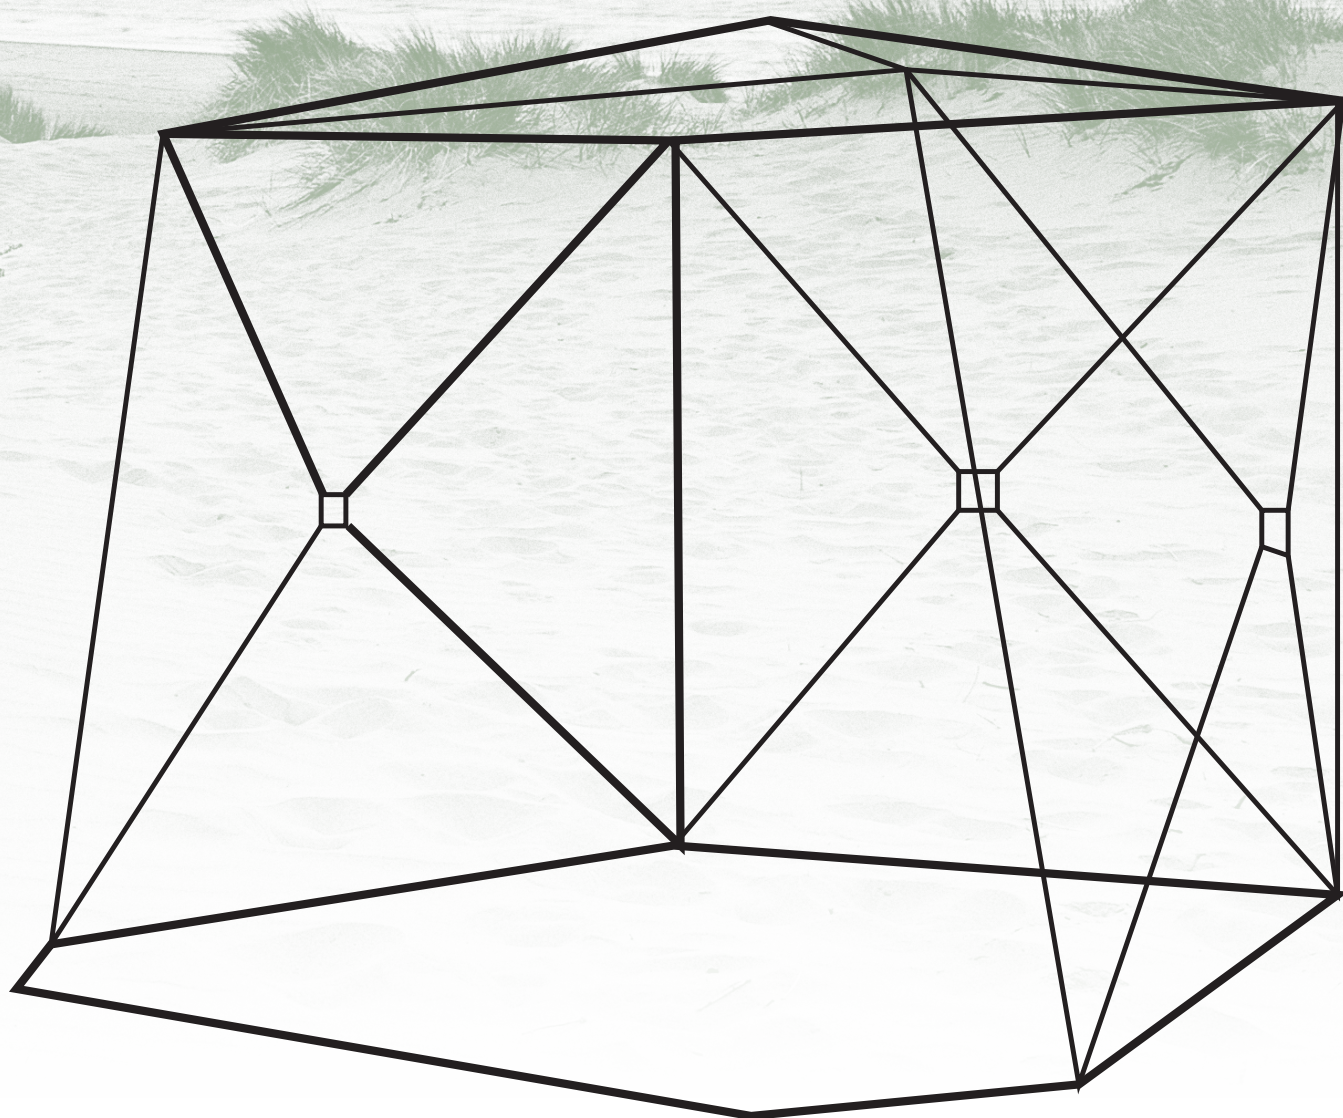

Screen House 4 Mini

• Item instructions •

Thank you

for purchasing this product. At Quest we take every care to ensure that the product fulfils your expectations. We hope you enjoy using this product


General Use

Failure to follow the general use instructions below could lead to damage to the screen house or injury to your person. Always read and follow these instructions when using the product.

- The screen house is an external product and designed to be used outside.
- Due to the changeable weather conditions it is recommended that you always use all of the storm straps and pegging points in order to secure your screen house.
- It is also recommended that the screen house not be left unattended. Due to the nature of outdoor products along with the changeable weather conditions and differing ground conditions, many unexpected circumstances can occur. If the screen house is left unattended it could impact the performance of the screen house.
- If the screen house is going to be left unattended for an extended period of time (longer than a couple of days), we recommend to take the screen house down.
- Do not leave outside in severe weather conditions.
- Please retain all information for further reference


Screen House 4 mini
Roof Frame Diagram

Code: A5503-GR • Diagram Version 1

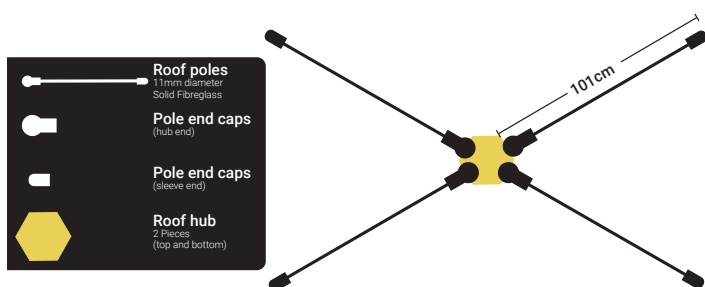

Screen House 4 Mini
Side Frame Diagram

Code: A5503-GR • Diagram Version 1

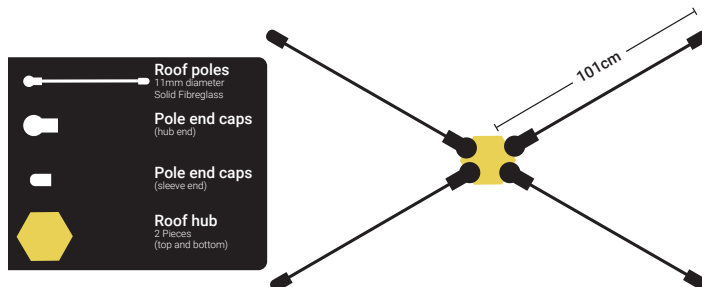

Quest Leisure Products : An MQL Brand
Find us at : www.mql.co.uk

Folding and Unfolding

Details on how to use your product.

Erecting your Screen House Mini

- Remove the screen house from the carry bag and place onto the ground.
- Hold the roof hub in your hand and raise up. The frame will start to unfold and you should have the black floor on the ground. You can then place the roof hub on the ground.
- **IMPORTANT** before proceeding, ensure that the black floor is on the ground and that the frame is not tangled with any of the fabric.
- Start next to any side and pull the side centre hub towards you using the webbing strap. This will pop the side out towards you.
- Repeat this with each side and the screen house will stand up, with the roof pointing down.
- To pop the roof, simply push the centre hub up. You can do this by either going inside the screen house and pushing up, or by pulling the roof up by the loop on the top, or by pushing one of the roof beams up. The Screen House is now erected, but we always recommend pegging it down.
- Peg each corner of the screen house inside using the pegging eyelets and pegs that are included in the screen house (you can use your own pegs if you prefer).
- Once all the corners have been pegged, attach the storm straps (if not already attached) to the screen house via the stainless steel loop in the centre of the sidewall. Peg the other end of the storm strap into the ground and then tighten the strap.
- **DO NOT** over tighten the strap. The strap should be tight enough to hold the sidewall in place, it should not pull the sidewall towards the ground. If they are over tightened they can lead the roof to pop down when in use.

Taking your Screen House Mini down

- The screen house should not be taken down in high winds as it could cause damage when the storm straps and pegs are removed. If you are taking it down in high winds you must take extra care and always have more than one person present to help secure the screen house once the straps and pegs have been removed.
- Slacken the storm straps and remove the pegs from the ground, then remove all pegs from the corners.
- Next pop the roof down, by pushing on one of the roof poles and the roof will pop down instantly.
- Walk outside of the screen house and push the centre of the sidewall in until it springs in and collapses. You may find it easier to hold the top left corner with one hand and push the centre in with the other.
- Repeat on every side until the entire screen house has collapsed.
- Once the screen house is laying on the ground, roll the screen house up.
- **ENSURE** that the frame is not twisted when doing this as failure to do so could cause damage to the product.
- Carefully place the screen house into the carry bag.

QUEST

leisure products



Quest Leisure Products : An MQL Brand
Find us at : www.mql.co.uk



x.com/QuestLeisure



facebook.com/MQLUKLTD



youtube.com/@QuestLeisure



instagram.com/mql_uk



linkedin.com/company/6606796