



MODEL: (LFDCK101)

2 Burner Camping Stove

Please read these instructions before using this appliance
Please retain these instructions for future reference
To be used in well-ventilated areas
Product may vary from illustrations

2 Burner Camping Stove		CE
Model	LFDCK101	
Trade Name	Lifestyle Appliances	
Contact	sales@lifestyleappliances.co.uk	
Appliance Category (cat.)	I ₃₊ (28-30/37)	
Nominal Supply Pressure (mbar)	Butane G30 @ 28~30mbar Propane G31 @ 37mbar	
Nominal heat input	ΣQ_n Maximum	4.4kW (2.2kW per burner)
Gas consumption	Maximum	320g/h (160g/h per burner)
Injector number	0.73	
Ignition System	Battery operated piezo	
Destination countries	BE, FR, IT, LU, IE, GB, GR, PT, ES, CY, CZ, LT, CH, SI, LV, SK	

SAFETY PRECAUTIONS

CAUTION: Provide ample ventilation. When in use this stove consumes oxygen; to prevent injury or even death DO NOT use this stove in an unventilated space.

IMPORTANT

Please read these instructions carefully to familiarise yourself with the appliance before assembly and first use. Keep these instructions safe for future reference.

SAFETY INFORMATION

Your stove consumes oxygen while it is in use. For this reason, adequate ventilation should be provided in spaces in which the stove is used. This ensures the removal of products of combustion and allows the entry of replacement air.

1. Read these instructions carefully before using the appliance.
2. This appliance requires a hose and regulator – Please consult your dealer.
3. For outdoor use only. Only use in a well-ventilated area.
4. The stove should be tested for leaks before initial use and whenever the cylinder is re-connected.
5. It is important that all gas connections have been correctly made to prevent any leakage. Do not use a naked flame to test for leaks. Use soapy water or a leak detection spray.
6. Always use your cylinder in an upright position.
7. Always turn off the appliance at the regulator when not in use.
8. Do not use your stove while sleeping.

Warnings

Perform a leak test on all connections every time you reconnect the cylinder or if the heater has not been used for a significant period.

Do not move the appliance when lit.

The stove will become hot when in use. Keep children away.

ASSEMBLY AND FUNCTION

- Do not use the stove if it is damaged, leaking or does not operate correctly.
- Handle the stove with care. Do not drop it.
- Always operate the stove on a firm level surface. Ensure that the stove is stable and does not rock.
- This stove is for direct connection to a Butane or propane cylinder via an appropriate regulator.

- The stove must be kept away from flammable items during use. Minimum safe distances are: 120cm above the stove; 60cm to the rear and sides.
- The recommended pot size is minimum 180mm; maximum 250mm.
- Do not use pots of greater than the recommended size as this will affect the performance of the stove.
- Do not modify the stove, any modification could be dangerous. Only use the stove for the purposes for which it was designed.
- The stove must not be moved whilst in use.
- Never leave the stove unattended once lit.
- Avoid touching hot parts with bare hands. The use of gloves is recommended when using the stove as parts of the stove will become hot.
- When using the stove ensure any pot, and any cooking surfaces are correctly placed.

HOSE (Not supplied)

- This appliance must only be used with an approved hose and regulator. The hose must be checked for crackling, splits, damage etc. before every use and before connecting the gas cylinder.
- Replace the hose if it is damaged in any way; do not use the stove.
- Do not kink, pinch or twist the hose.
- The length of the hose should be no less than 0.8m and no longer than 1.2m. Replace the hose immediately that any damage is found.

GAS CYLINDER (Not supplied)

- Only use a gas cylinder as specified in this manual.
- When changing the cylinder do so in a flame-free, well-ventilated area, preferably outdoor, away from sources of ignition such as pilots, naked flames, electric appliances etc. and away from other people.
- Keep the gas cylinder away from flames and heat. Do not place on the stove or any other hot surface.
- To ensure the correct operation of the gas cylinder always use the cylinder in an upright position.
- Do not remove the gas cylinder whilst the stove is lit.
- When storing the stove, the gas cylinder must be disconnected and stored correctly, preferably outdoors.

REGULATOR (Not supplied)

- Follow the instructions supplied with your regulator.
- Only use a regulator as specified in this manual. Using an incorrect regulator can lead to the failure of the product and would void any warranty.

LIGHT BACK

- Should a light back situation occur, where the flame burns back and ignites inside the burner or venturi tube, immediately turn the gas supply off at the regulator/gas cylinder valve and then turn the stove control valve to off. Wait for the stove to cool and relight the stove.
- Should light back be persistent please contact your dealer

LEAKS

- If you smell gas or notice a gas leak immediately turn off the gas supply at the regulator/gas cylinder valve.
- Do not use the stove until the leak has been located and rectified.
- To check for gas leaks, do so outside using soapy water. Do not use a flame.


TESTING FOR LEAKS

- Once the stove is assembled and connected to a cylinder a gas leak test must be carried out before use.
- Using soapy water brush all connections, turn the gas supply on. Observe the connections if continuous bubbles can be seen then a leak is present. If a leak is found disconnect the stove from the cylinder, retighten the connection and repeat the leak test.

PARTS LIST



Accessories included

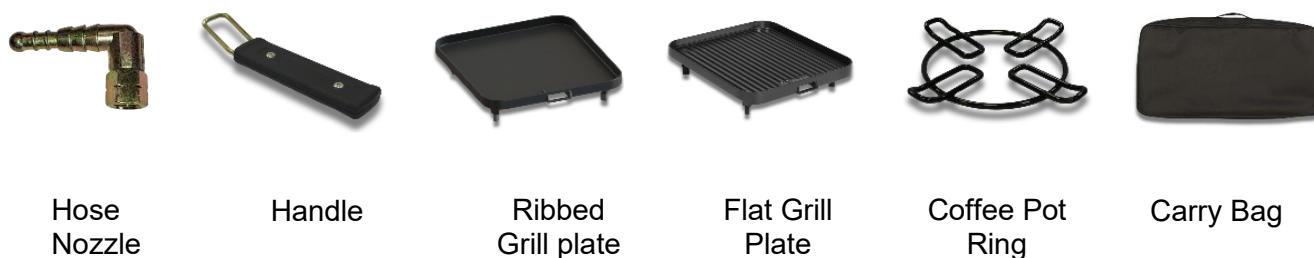

Also required but NOT included

- 1 x AA battery
- 1 x Gas hose with an i.d. of 8mm and made to standard EN16436 Class 2 or Class 3. Minimum length of 0.8m; Maximum length of 1.2m. Consult your retailer
- 2 x Hose securing clips. Consult your retailer
- 1 x Low pressure gas regulator (Output pressure: Butane 28-30mbar; Propane 37mbar) Consult your retailer
- 1 x Butane up to 15kg or Propane cylinder up to 13kg. Consult your retailer

ASSEMBLING & DISASSEMBLING YOUR STOVE

WARNINGS

When fitting the cylinder always do so away from any source of ignition.

DO not smoke when fitting or changing a cylinder.

Always check the condition of your hose before use and replace immediately if necessary.

STOVE

1. Lift the lid and remove all accessories and packaging.
2. Fit the two side windshields by sliding the lugs on the Wind Shields into the corresponding holes on the side of the stove and then clip the Wind Shield to the Lid.
3. Stand the stove on a firm, fire resistant surface.
4. Ensure all safe distances are maintained 120cm above; 60cm to the rear and sides.

HOSE & REGULATOR

1. Check your hose is undamaged and to the correct standard.
2. Push your hose onto the hose nozzle and secure with 1 of your hose clips (example image right)
3. Screw the hose nozzle, spanner tight, onto the Gas Inlet (Note: the nozzle has a left-hand thread)
4. Put your other clip onto the other end of your hose, but don't secure it, then push the other end of your hose onto your regulator. Now secure with your hose clip. (example image right)
5. Ensure the Control knobs are in the OFF position.
6. Away from sources of ignition connect your regulator to your cylinder following the instructions provided with your regulator. Note: Ensure the hose isn't kinked, twisted, pinched etc.
7. Turn your regulator/cylinder valve to the ON position and carry out a leak test on all connections. DO this every time a cylinder is connected to the regulator.



IGNITION

1. Unscrew the Piezo Button and slide in your AA battery (+ve side out)
2. Refit the Piezo Button

DISASSEMBLY AFTER USE

1. After use, turn the regulator/cylinder valve to the off position. Once the flame has extinguished turn the Control Knob to the OFF position.
2. Remove your regulator from the cylinder as per the instructions supplied with the regulator.
3. Store your gas cylinder as per your gas cylinder supplier's instructions.
4. Once the stove is cool wipe the stove with a soft cloth, warm water, and a little detergent. Do not use abrasive cleaners or scouring pads.
5. Dry the stove thoroughly.
6. Unscrew the Hose Nozzle from the Gas Inlet. (Note: the Hose Nozzle has a left-hand thread)
7. Carefully fold the stove shut and store in the Carry Bag.

OPERATING THE STOVE

WARNINGS

Before lighting the appliance ensure that all parts are in good working order and that you have carried out a leak test.

Ensure all protective packaging has been removed from the stove.

Ensure all pots are between 180mm and 250mm in diameter.

Ensure the stove is on a firm level surface.

After being in storage inspect the stove for any signs of insects or cobwebs which can affect gas supply.

LIGHTING THE STOVE

Note: Lighting the stove is best carried out with the Grill Plates removed so that ignition can be observed.

1. Having carried out the assembly and leak test instructions as above, make sure the Control Valves are in the OFF position then turn the regulator/gas cylinder ON.
2. Push in and turn one Control Knob 90° anticlockwise then press and hold in the Piezo Button.
3. You should see a spark at the Burner and it will light. Note: On first lighting the stove may take slightly longer to light as any air in the pipework needs to first be purged.
4. If the gas does not ignite turn the Control Knob back to the OFF position and repeat steps 2 & 3.
5. If after two attempts the stove doesn't light turn the Control Knob to OFF and wait 1 minute for any gas in the burner to vent then repeat the above process. The burner should normally light within the first 5-10 seconds.

NOTES

Once the stove has been lit the Burner flame can be turned down by turning the Control Knob in an anti-clockwise direction or turned up by turning the Control Knob in a clockwise direction. Flaring may occur when cooking high fat content foods. To reduce this flaring turn the heat down until the flaring reduces.

It is dangerous to move the stove whilst it is lit.

After use turn your regulator/gas cylinder off first and once the flame is extinguished turn the Control Knob to the OFF position.

Wait until the stove is completely cold before packing it away.

Only use plastic or wooden utensils when using the non-stick grill plates; metal utensils can damage the non-stick coating.

CLEANING

- To prolong the life of your stove it is recommended that the stove is cleaned after every use.
- Allow the stove to go completely cold before commencing cleaning.
- Use a soft cloth, water and a non-abrasive detergent to clean all exterior surfaces.
- DO NOT immerse the stove in water as this will cause the stove to malfunction and void any warranty.
- Always allow the grill plates to fully cool before immersing them in water.
- Ensure the stove is completely dry before use and that no water has entered into the burners.
- Do not use abrasive cleaners as they will damage the surfaces.
- Clean the stove after every use. After cleaning give the cooking surfaces a light wipe of oil to recondition them.
- High pressure steam or water pressure cleaners should not be used to clean this stove.

STORAGE

- Turn the gas supply off at the regulator/gas cylinder. Once all flames are extinguished disconnect the regulator from the gas cylinder (Refer to the regulator instructions for details)
- DO NOT store the stove with the gas cylinder still connected.
- Store the gas cylinder outdoors. Under no circumstances store the gas bottle in a cellar.
- Allow the stove to fully cool before cleaning it.
- Once cool place the stove in the carry bag along with the hose and regulator. Store the stove in a dry place.

MAINTENANCE

- Clean your stove after every use and before storing it.
- Check the condition of your gas hose and regulator before every use. Replace either if showing any signs of damage.
- Leak test all connections before use.

Distributor: Lifestyle Appliances Ltd,
Unit 66 Enfield Industrial Estate, Redditch, Worcs. B97 6DE
Tel: 01527 65126 Email: sales@lifestyleappliances.co.uk Web:
www.lifestyleappliances.co.uk